
User Manual

Make your life with cars more convenient



Audew Please read the manual carefully before use and keep it for reference later

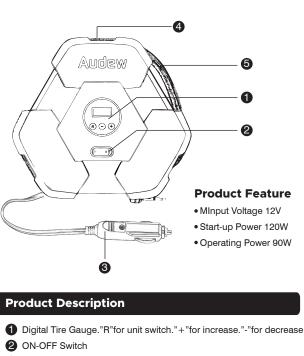

3 Power Cord

- 4 LED Light
- 5 Air Pipe

HOW TO USE:

1.Start the engine then insert in the 12V car cigarette lighter.

2. Change the nozzle for different occasions.

3.Connect the tire with the air pipe.

4.Switch the unit you want with the button "R" and increase/decrease the tire pressure you want with the button "+"/"-".

5.Turn the switch "on" and wait, it will stop automatically when the tire pressure reach the number you set before.

6.When the work is done,turn the switch "off" then get off the air pipe and pull the plug out

7.Keep it in the dry place for the next use.

ATTENTION:

1.Contact us if you have any problem with our product.Learn more information on www.audew.com Feel free to email us ,We will respond within 24 hours.

2.The product is only for 12V car.

3.Please start the car before turn on the tire inflator.

4.Keep it "OFF" when not in use.

5.If you need to reinflate, you'll need to switch off the power switch and then turn it back on again.

6.Do not use it for a long time, The vehicle mounted pneumatic pump working time should not exceed 8 minutes, and should be turned off for a while before using again.